

RASTROJERO

BOTONES PULSADORES / PUSH BUTTONS

B 712

Cromada / Chrome



Botón Pulsador c/ llaves
Push Button with keys

Rastrojero '70/'78

B 713

Cromada / Chrome




Botón Pulsador s/ llaves
Push Button with no keys

Rastrojero '70/'78

MANIJA EXTERIOR ABRE PUERTA / OUTSIDE DOOR HANDLE

M 631

Cromada / Chrome

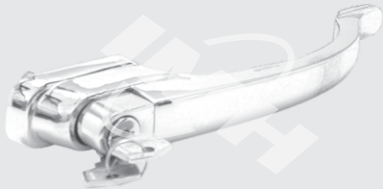


Manija Exterior Abre Puerta c/ llaves
Outside Door Handle with keys

Rastrojero '70/'78

M 630

Cromada / Chrome

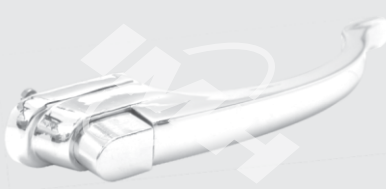

Manija Exterior Abre Puerta S/ llaves
Outside Door Handle with no keys

Rastrojero '70/'78

MANIJA INTERIOR ABRE PUERTA / INSIDE DOOR HANDLE

C 431

Cromada / Chrome



Manija Interior Abre Puerta
Inside Door Handle

Rastrojero '74/'80

L 403

Cromada / Chrome



Manija Levanta Cristal
Window Regulator Handle

Rastrojero '65/'69

L 431

Cromada / Chrome



Manija Levanta Cristal
Window Regulator Handle

Rastrojero '70/'80